

These instructions contain important information regarding the proper installation, safe use and maintenance of your Floating Mount Saddle Bag hardware. We urge you to read it and the Owner's Manual completely. Follow the recommendations for the most trouble-free and enjoyable use.


warning

THE HARDWARE DESCRIBED IN THIS MANUAL WAS DESIGNED SOLELY TO MOUNT THE VETTER FLOATING MOUNT SADDLE BAGS TO THE MOTORCYCLE(S) DESIGNATED.

If you are unable to determine if this hardware is for your motorcycle, contact your dealer. If your dealer is unavailable, contact the Vetter Corporation, Customer Service Department, Rantoul, IL 61866 (217) 893-9300. These instructions contain valuable information for future reference. They must be given to the customer.

note:

This manual may cover several motorcycles. Some illustration details may differ from your motorcycle. Follow the instructions.

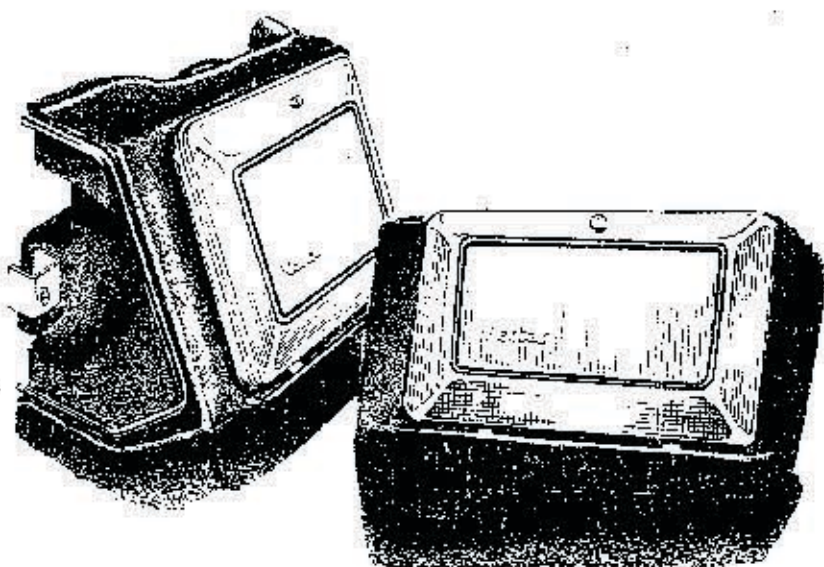

Yamaha 1982 XJ 1100 J Maxim

SPORT SADDLE BAG HARDWARE INSTRUCTIONS


140 120 155

©Vetter Corp.
3-17-82

Vetter

PREPARE THE MOTORCYCLE

- 1** Place the bike on it's center stand and remove the seat.
- 2** Trace the turnsignal wires to the bullet connector's and disconnect. Remove the turnsignals.
- 3** Remove the rubber grommets from the turnsignal mounting tabs.
- 4** Remove the passenger foot pegs.

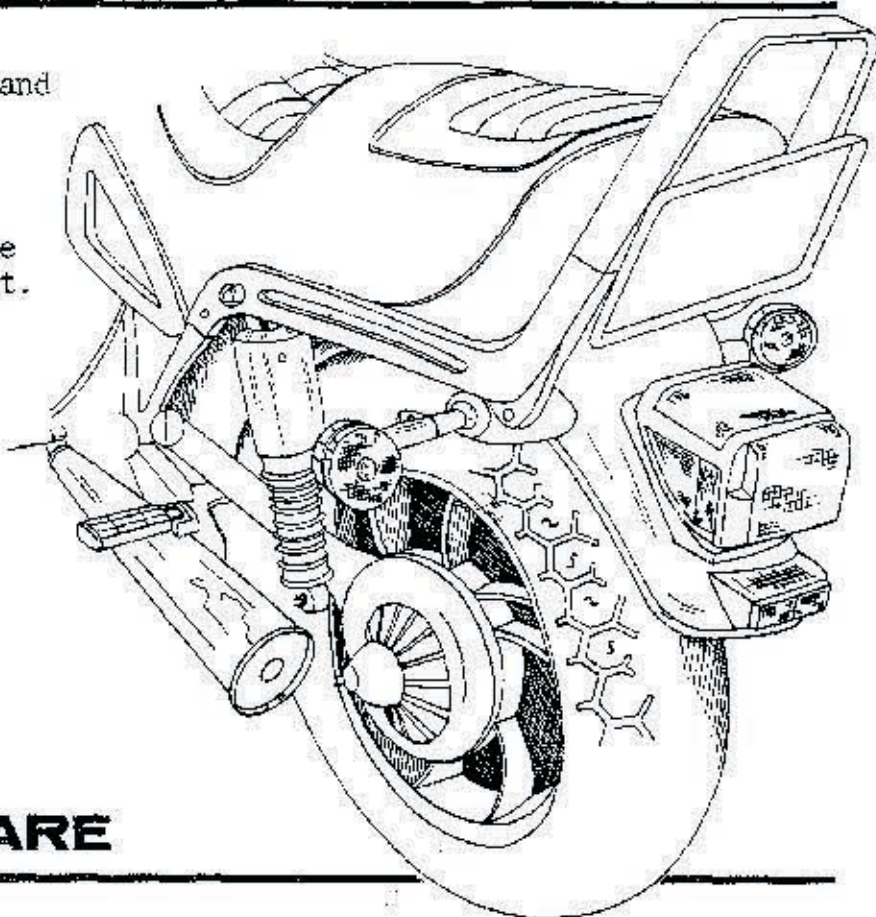

INSTALL THE HARDWARE

- 1** Place the special supplied washer inside the turnsignal mounting tab from the backside.


note: Due to the hole in the mounting tab being oval, the washer can be put in only one way.

- 2** Position the sideloop against the bike. Using the 8x25mm bolt, fasten the mounting bracket to the turnsignal tab in the following sequence: 8x25mm bolt, mounting bracket, turnsignal tab, special washer, 8x17mm flat washer, and 6mm lock nut. Do not tighten completely at this time. Repeat for the other side. (illus. 2)

- 3** Using the stock foot peg bolt, fasten the front strut to the passenger foot peg mounting plate. (illus. 3)

- 4** Position the rear cross strut using the 6x10mm bolts, 6x12mm flat washers and 6mm lock nut. (illus. 4)

- 5** Mount the turnsignals as follows: turnsignal, tomahawk, 10mm lock washer and stock lock nut. (illus. 4)

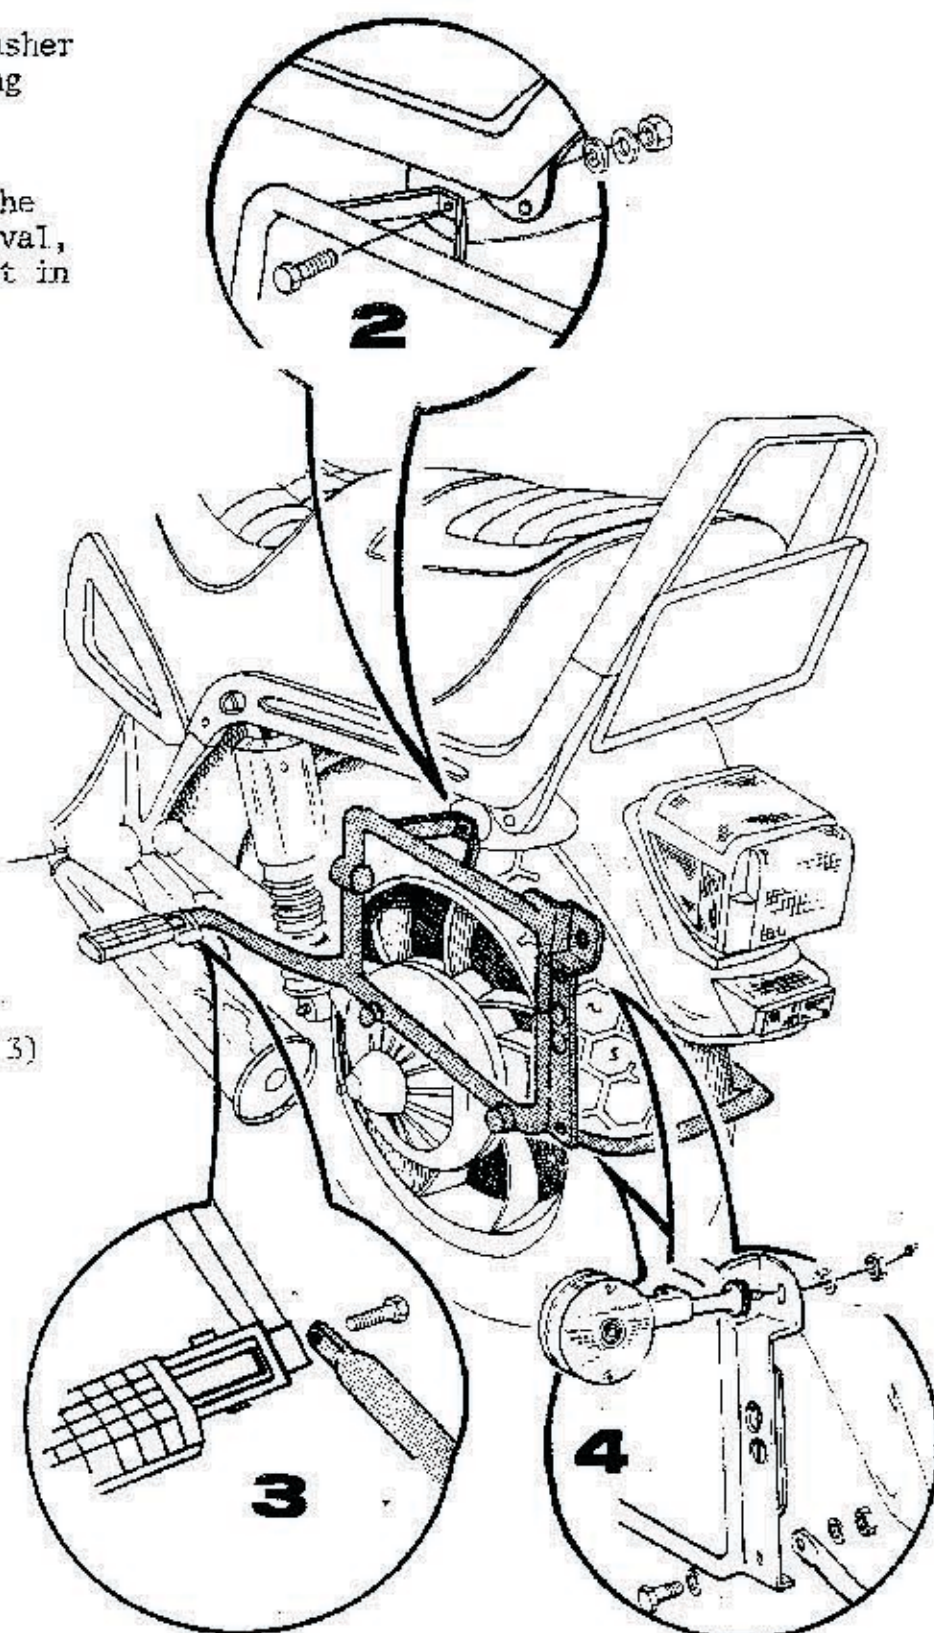

- 6** Due to the grabrail/backrest, this bike will not be fit with the luggage rack. Continue with your Saddle Bag Owner's Manual for mounting your saddle bags. We suggest you insert these instructions in the Owner's Manual for future reference.